



## INSTALLATION INSTRUCTIONS FOR PART 95-9306

### APPLICATIONS BMW 3-Series 2006-10

(Use 98-9306 For Models With Heated Seats)

# 95-9306B


#### KIT FEATURES

- Double DIN Head Unit Provision
- ISO Stacked Head Unit Provision
- *Painted matte black*



#### KIT COMPONENTS

- A) Double DIN Trim Plate
- B) Double DIN Brackets
- C) Two 1/2" #8 Pan Head Screws
- D) Two Plastic Snaps

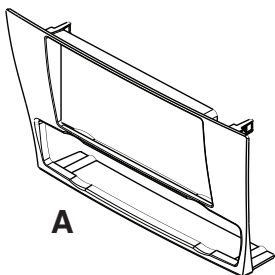


B



C




D

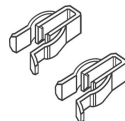

#### TOOLS REQUIRED:

Small Flat Blade Screwdriver/ Panel Removal Tool  
Phillips Screwdriver • Torx Screwdriver • Cutting tool or file



1-800-221-0932



[www.metraonline.com](http://www.metraonline.com)

© COPYRIGHT 2004-2010 METRA ELECTRONICS CORPORATION



**TABLE OF CONTENTS**

**Dash Disassembly**

**- BMW 3-Series 2006-10**

**(Non factory NAV) .....1**

**Kit Assembly**

**- Kit Preparation**

**Double DIN Head Unit Provision/ Stacked ISO DIN Head Unit Provision . . 3**

**Note:**

**Refer also to the instructions included with the aftermarket radio.**



*Metra recommends MECP certified technicians.*



**KNOWLEDGE IS POWER**

Enhance your installation and fabrication skills by enrolling in the most recognized and respected mobile electronics school in our industry. Log onto [www.installerinstitute.com](http://www.installerinstitute.com) or call 800-354-6782 for more information and take steps toward a better tomorrow.


**BMW 3-Series 2006-10**  
**(NON FACTORY NAV)**

- 1** Disconnect the negative battery terminal to prevent an accidental short circuit.
- 2** Carefully unclip and remove the climate controls. (Figure A)
- 3** Remove two Phillips screws from the bottom of the radio and remove. (Figure B)
- 4** Remove the four Torx screws from the sub-dash bracket and remove. (Figure C)




*Continued on page 2.*

**BMW 3-Series 2006-10**  
**(NON FACTORY NAV)**

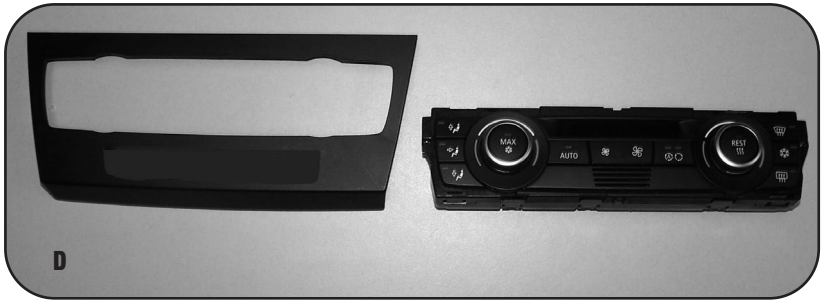

**5** Remove the climate control from the climate control bezel. (Figure D)

**6** Cut or file the edges of the climate controls as shown. (Figure E, F)

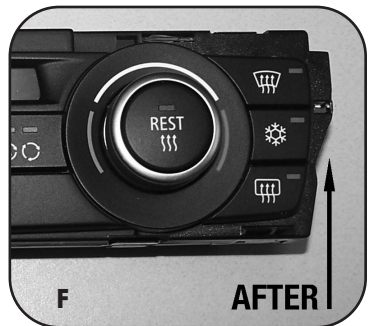

*Continue to kit assembly*

**KIT ASSEMBLY**

**1** Mount the DDIN radio to the supplied DDIN brackets using ISO screws supplied with the aftermarket radio.

**2** Locate the factory wiring harness in the dash. Metra recommends using the proper mating adapters from Metra and Axxess to intergrate your new radio. Re-connect the negative terminal and test the unit for proper operation.



**3** Mount the radio into the dash. (Figure A)

**4** Place the climate controls into the opening below the new radio and push it back as far as it will go, without damaging the dash. (Figure B)



**5** Push the included snaps onto the legs on the top of the DDIN trim plate.

**6** Clip the two included plastic snaps onto the top legs of the DDIN trim plate. Snap the DDIN trim plate over the radio and use the supplied 1/2" screws to screw into the dash at the bottom. (Figure C)



**95-9306B INSTRUCTIONS**

**NOTES**

---

---

---

---

---

---

---

---

---

---

---

---

---



# 95-9306B INSTRUCTIONS

## NOTES

---

---

---

---

---

---

---

---

---

---

---

---



**1-800-221-0932**



**[www.metraonline.com](http://www.metraonline.com)**

REV. 8/9/10 © COPYRIGHT 2003-2009 METRA ELECTRONICS CORPORATION INST95-9306B