



### Toyota Camry 2007-2011

Visit [MetraOnline.com](http://MetraOnline.com) for more detailed information about the product and up-to-date vehicle specific applications


#### KIT FEATURES

- ISO DDIN radio provision
- Requires the factory radio brackets to be reused

#### KIT COMPONENTS

- A) Radio housing
- B) (4) #6 x 3/8" Phillips Screws

A

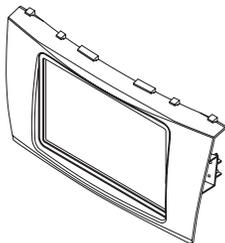

B



#### TABLE OF CONTENTS

Dash Disassembly .....	2
Kit Assembly .....	3

#### WIRING & ANTENNA CONNECTIONS (sold separately)

Wiring Harness: 70-1761 • TYTO-01  
Antenna Adapter: Not required


#### TOOLS REQUIRED

- Panel removal tool
- Phillips screwdriver
- 10mm socket wrench


**Attention!** Let the vehicle sit with the key out of the ignition for a few minutes before removing the factory radio. When testing the aftermarket equipment, ensure that all factory equipment is connected before cycling the key to ignition.

## DASH DISASSEMBLY


1. Turn the shift knob counterclockwise to remove.
2. Unclip and remove (2) trim panels on each side of the pocket below the radio/climate control assembly. (Figure A)
3. Unclip and remove the shift knob trim panel. (Figure B)
4. Unclip and remove the top of the center console including the cup holders. (Figure B)
5. Remove (2) Phillips screws from each side of pocket below the radio/climate control assembly. (Figure C)

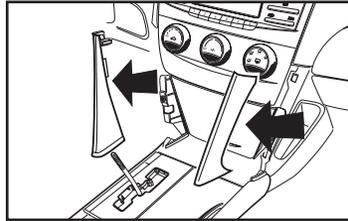

(Figure A)

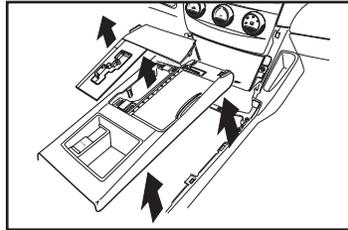


(Figure B)

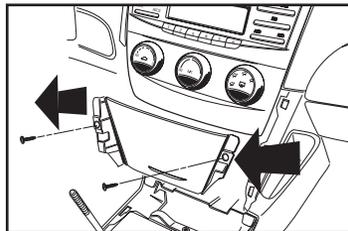


(Figure C)

6. Unclip and remove the pocket. (Figure C)
7. Unclip and remove the A/C vents above the radio. (Figure D)
8. Remove (2) 10mm bolts above the radio (behind A/C vents) and (2) 10mm bolts below the climate controls (behind pocket) then remove the radio/climate control assembly. (Figure E)
9. Remove the (6) Phillips screws securing the brackets and climate control to the radio. (Figure F)
10. Unscrew and remove the (2) clips from the back of the factory radio. (Figure F)


*Continue to Kit Assembly*

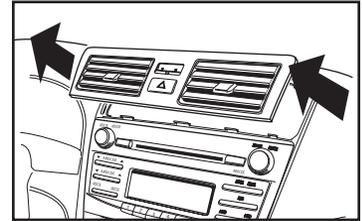

(Figure D)

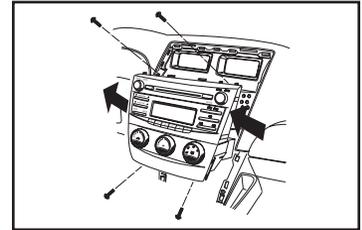


(Figure E)

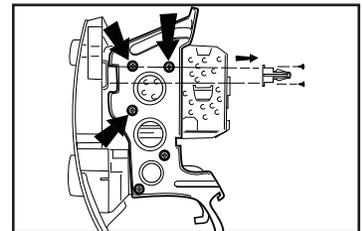

(Figure F)


## KIT ASSEMBLY

1. Align the small legs on the bottom of the **radio housing** with the slots in the top of the climate control, then slide the climate control sideways to engage together. (Figure A)
2. Secure the (2) clips removed in Dash Disassembly to the **radio housing brackets** using (4) #6 x 3/8 Phillips screws provided. (Figure A)

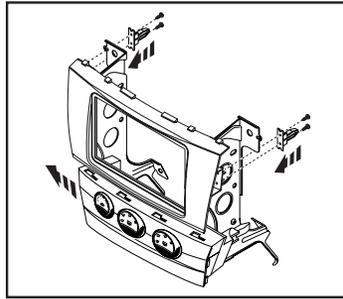

(Figure A)

3. Slide the radio into the bracket/radio housing/ climate control assembly, then secure using the screws supplied with the radio. (Figure B)
4. Locate the factory wiring harness and antenna connector in the dash. Metra recommends using the proper mating adapter from Metra or AXXESS. Test the radio for proper operation.
5. Slide the radio assembly into the dash, then secure using the factory screws.
6. Reassemble the dash in reverse order of disassembly to complete the installation.

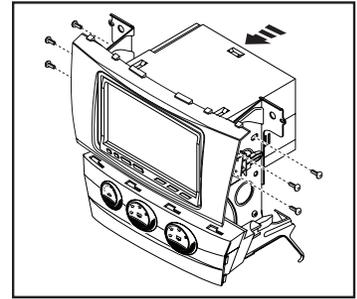

(Figure B)



**95-8218S**  
INSTALLATION INSTRUCTIONS



If you are having difficulties with the installation of this product, contact our Tech Support line either by phone at **1-800-253-TECH**, or email at **techsupport@metra-autosound.com**. Before doing so, look over the instruction booklet a second time and ensure that the installation was performed exactly as the instruction booklet is stated. Have the vehicle apart and ready to perform troubleshooting steps before contacting Metra/Axxess Tech Support.



**KNOWLEDGE IS POWER**

Enhance your installation and fabrication skills by enrolling in the most recognized and respected mobile electronics school in our industry. Log onto [www.installerinstitute.com](http://www.installerinstitute.com) or call 800-354-6782 for more information and take steps toward a better tomorrow.



**Metra recommends MECP certified technicians**